

GTN Background Information and Basics

Overview	i
Using the GTN 750 Physical Controls (a.k.a. "Real Buttons and Knobs") ..	ii
Switch control between the com and nav radio	iii
Adjust the volume of the active com radio	iii
Adjust the com squelch	iii
Quickly tune the emergency frequency 121.5.....	iii
Tune a STBY com frequency with the knobs	iii
Swap the STBY com frequency to the active window.....	iii
Adjust the volume of the nav radio	iii
Listen to the Morse Code identifier for a VOR or localizer	iii
Tune a STBY nav frequency with the knobs	iii
Swap the STBY nav frequency to the active window	iv
Return to the Home page from any page.....	iv
Return to the Map page from any page.....	iv
Navigate direct-to any waypoint	iv
Using the Touch-Screen Controls	v
General tips for the alpha-numeric keypad (on-screen keys).....	vi
Tuning Com and Nav Frequencies.....	vii
Tune a STBY com frequency	vii
Find a com frequency	vii
Monitor both the active and STBY frequencies.....	viii
Add a frequency to the User list.....	viii
Delete a User frequency	viii
Tune a STBY nav frequency	viii
Swap active and STBY com or nav frequencies	viii
Find a nav frequency	viii
Controlling the Radios and Other Audio	ix
Show the detailed audio panel controls	ix
Select a radio for transmissions	ix
Monitor a nav radio	ix
Monitor a com radio while listening and transmitting on the other com radio	x
Toggle audio panel features on/off.....	x
Engage or disengage split mode.....	x
Put pilot on Com 2 and copilot on Com 1	x
Adjust the speaker volume.....	x
Turn 3D audio on or off	x
Adjust volume or squelch for the intercom	xi
Replay the most recent com recording.....	xi
Select a specific com recording	xi
Adjust the playback volume.....	xi
Set a transponder code	xi
Checking GTN Status	xii
Check the status screens on startup.....	xii
Check the system status after startup	xii
Check the GPS status.....	xii

GTN Navigation and Control

Navigating Direct-To Anywhere	1
Navigate from the present position direct-to a new waypoint.....	1
Navigate direct-to a waypoint in the current flight plan	2
Navigate direct-to a nearby airport	2
Find a waypoint identifier you don't know.....	2
Navigate direct-to a map waypoint.....	3
Navigate direct-to a waypoint on a specific course	3
Using a Flight Plan to Navigate	4
Create a new flight plan and save it in the catalog.....	4
Activate a stored flight plan	4
Show the active flight plan	4
Delete the active flight plan	4
Invert the active flight plan	5
Invert and activate a stored flight plan.....	5
Preview a stored flight plan	5
Delete a stored flight plan	5
Add a waypoint to the active flight plan	5
Remove a waypoint from the active flight plan	5
Activate a leg in the active flight plan	6
Graphically edit the active flight plan	6
Load an airway	7
Collapse the waypoints in airways.....	7
Expand collapsed airways.....	8
Remove an airway	8
Using OBS Mode.....	8
Set a course with OBS mode and an external HSI.....	8
Suspend automatic waypoint sequencing.....	8
Resume automatic waypoint sequencing.....	8
Using User Waypoints.....	8
Create a User waypoint	9
Adding IFR Procedures (DP, SID, STAR, IAP)	9
Add a departure procedure to the active flight plan	10
Activate a departure procedure.....	10
Delete a departure procedure from the active flight plan.....	11
Add an arrival procedure to the active flight plan.....	11
Delete an arrival procedure	11
Loading and Activating Approaches	12
Load an instrument approach	12
Delete an approach from the flight plan	13
Change to a different approach to the same airport.....	13
Activate a leg of an approach.....	13
Proceed direct-to an intermediate fix.....	13
Types of RNAV approaches supported by the GTN.....	14
Specifics for ILS, LOC, and VOR approaches	14
Switch the CDI source sent to an external CDI	15
Fly the published missed approach procedure.....	15

Flying Visual (VFR) Approaches.....	16
Load and activate a visual approach.....	16
Customize when the Visual button appears	17
Flying Holds.....	17
Fly a charted hold in a procedure	17
Delete a hold (or course reversal) in a procedure.....	17
Activate a leg from a charted hold to the next waypoint	18
Create a custom hold at a waypoint in the active flight plan	18
Leave a hold and resume waypoint sequencing.....	18
Leave a hold and proceed direct-to a flight plan waypoint	19
Fly a published missed approach hold	19
Leave the missed approach hold	19
Flying DME Arcs and Radius-to-Fix (RF) Legs.....	19
Fly a DME arc that is part of a published procedure.....	19
Fly an RF leg that is part of a published procedure	20
Using Vertical Navigation (VNAV) and Along-Track Offsets.....	21
Enable VNAV guidance	21
Disable VNAV guidance	21
Set up a VNAV altitude constraint (crossing restriction).....	22
Modify an altitude constraint.....	22
Remove a VNAV altitude constraint (crossing restriction)	22
View or adjust the current VNAV profile or Flight Path Angle.....	23
Change the default Flight Path Angle	23
Create a parallel track.....	23
Cancel a parallel track	23
Use VNAV while flying approaches.....	23
Key points for using VNAV	24
Other GTN Features and Customization.....	25
Display the Home page and select a feature	25
Customize the Map page.....	25
Quickly control detail shown on the map (declutter)	25
Configure the orientation and zoom levels on the map	26
Customize the User fields on the map.....	26
Adjust traffic options	27
Adjust terrain options.....	27
Adjust weather display and options.....	27
Show and control optional approach charts and airport diagrams.....	28
View nearest airports, intersections, VORs, and more	28
Find waypoint information	28
Use optional services	29
Using the GTN Utilities.....	29
View the Utilities page.....	29
VNAV and VCALC Options.....	29
Use VCALC instead of VNAV.....	29
View trip planning information.....	29
View fuel planning information.....	30
Use the DAL/TAS/Winds calculator	30
Check RAIM.....	30

Set a generic timer to count up or down.....	31
Set a Trip Timer.....	31
Set a Departure Time clock	31
Create or edit a scheduled message	31
Use the Clean Screen utility.....	32
Configuring the GTN	32
Check the GTN system status	32
Check the GPS status and position accuracy	32
Check the status of external devices connected to the GTN.....	32
Configure the CDI scale, date/time format, keyboard type, and other settings.....	32
Configure airspace and waypoint arrival alerts	33
Change the default units	33
Change system audio volume.....	33
Adjust the GTN backlight level.....	33